

<b><u>Electrical Specification:</u></b>	Double insulated to Class II protection
	IP45 rated
	Nominal voltage 240v
	Nominal current 2.6 amp
	Nominal power 0.55 kw
	Current frequency 50Hz
	Motor rpm 2,850
	Power consumption 550 watts
	Drum speed 24 rpm

**Noise Level:** <70 dB(A)

**IMPORTANT  
PLEASE READ CAREFULLY**

This machine is hired under terms & conditions of the Hire Contract.

No liability will be accepted for any damage caused to persons or property through failure to observe operating and safety instructions.

A charge will be made for any damage caused to the machine through misuse or failure to comply with operating instructions.

Hirers are also reminded that they are liable for the replacement cost of any machine & accessories, lost or stolen.

**BE SECURITY WISE - DO NOT TAKE ANY CHANCES**

**E&J HIRE**  
[www.ejhire.co.uk](http://www.ejhire.co.uk)  
 Mobile: 07745 409795  
 Tel: (01843) 868185

## CEMENT MIXER

Model Mini 150 – 240v electric – unladen weight 57kg  
 Max. Drum capacity 136 ltr. Max. mixing capacity 90 ltr.


### SAFETY NOTES

- **BELLE strongly recommends the use of a RESIDUAL CURRENT DEVICE on 220/240v machines.**
- **DO NOT** wear loose clothing or jewellery that may become entangled in the working of this machine.
- **ENSURE** power cable is protected against damage and not liable to be tripped over or trapped under the mixer or in particular the swivel stand assembly.
- **CHECK** all safety guards are in position and correctly fitted. **NEVER** remove any safety guards that are fitted.
- **ALWAYS SWITCH OFF** and remove plug from socket before making any adjustments, or cleaning.
- **NEVER** allow children or anyone uninstructed to operate the machine. **KEEP ALL CHILDREN & ANIMALS AWAY.**
- **BEFORE STARTING WORK** inspect and clear the work area of any objects that could cause persons to fall onto moving parts / the machine.
- **DO NOT** touch any moving parts whilst the machine is running. **KEEP HANDS AND FEET AWAY.**
- **NEVER** tip mixer onto drum mouth when motor running.
- **RECOMMENDED SAFETY CLOTHING** goggles or safety glasses, gloves, boots & dust mask.

**IF A FAULT** or oil leak develops, do not attempt any repair, contact E&J HIRE Tel: 01843 868185

## BEFORE ATTEMPTING TO PLACE MIXER ON STAND

Lock axle to mixer frame using clip – as shown.

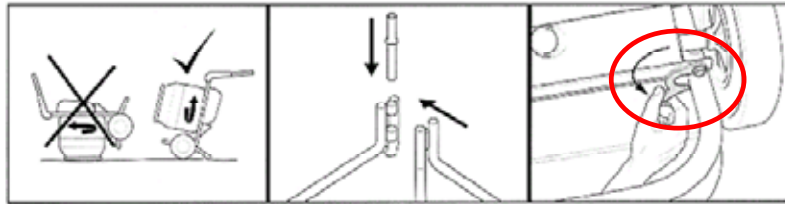

When on stand unlock the axle clip, mixer is now ready to use.

BEFORE ATTEMPTING TO REMOVE MIXER FROM STAND relock the axle to mixer frame.



If you do not put the clip on tipping off stand the mixer will collapse, landing hard on the drum rim, probably damaging it.

## HOW TO KEEP MIXER DRUM CLEAN

**ALWAYS START MIXER BEFORE LOADING DRUM** & keep mixer running all the time material is in the drum.

### **IMMEDIATELY AFTER EMPTYING**

Trickle a small amount of water into the drum and keep mixer running for a few minutes. **This will rinse drum clean before any material sets.** Cleaning can be enhanced by adding sharp sand / ballast to the water.

### **NEVER USE BRICKS OR LUMPS OF CONCRETE**

They have no cleaning effect but merely damage the drum.